




Do not drag the on the floor

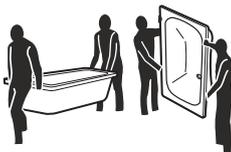

Due to the heavy weight, at least two persons are required to carry or move the bathtub.












Fragile Porcelain Enameled



When installing the bathtub, protect the bathtub surface, casing, wall and floor tiles from damage.

Assembly instructions *with metal feet:*

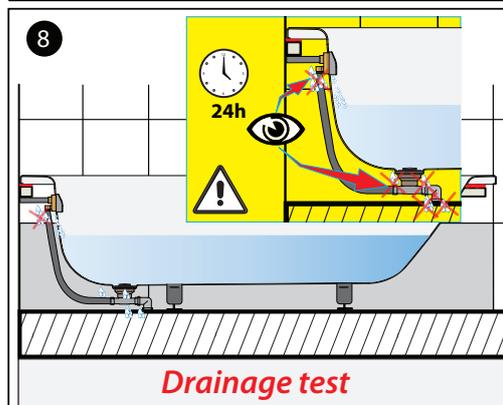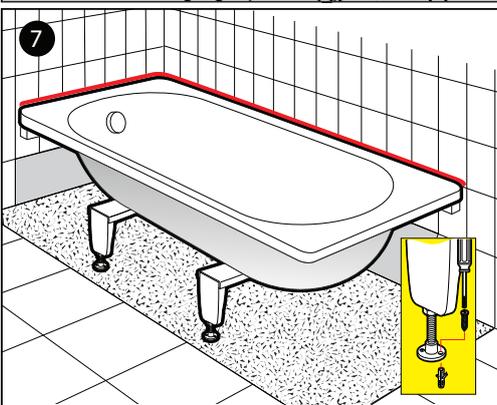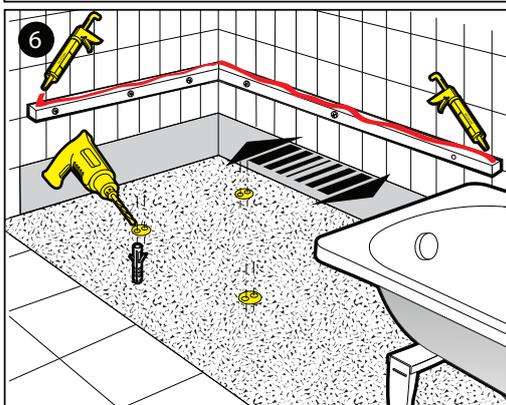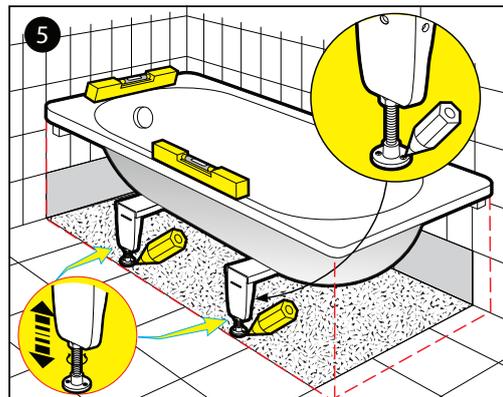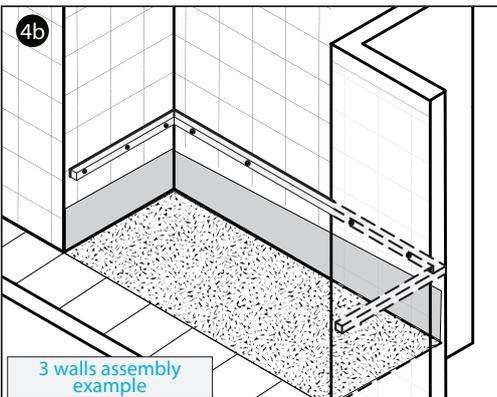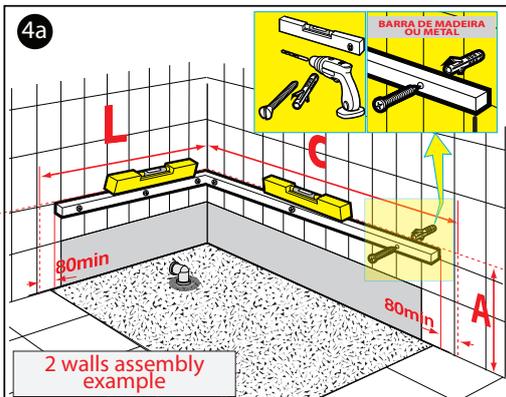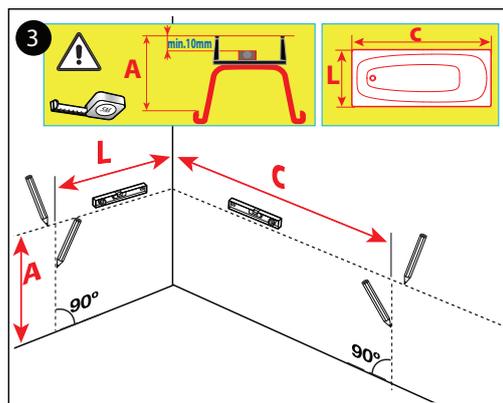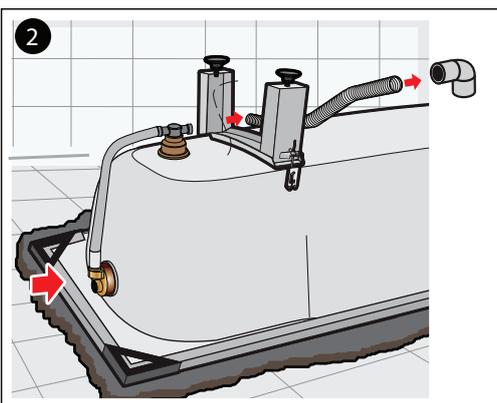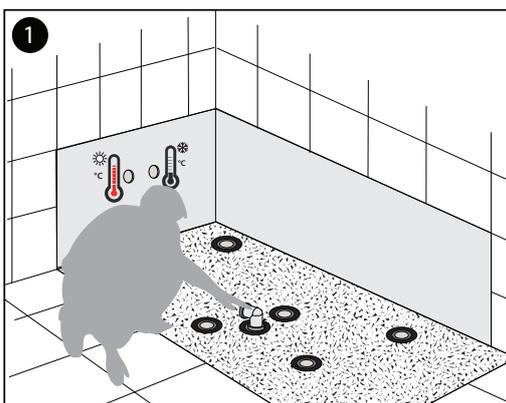


Building an bathtub aprons using rywall, PUR, EPS, XPS, Wood or Plywood panels


Minimum Thickness: 20mm
Recommended density: 11Kg/m³











L = Bathtub length

L = Bathtub Width minus (-) thickness of PUR board

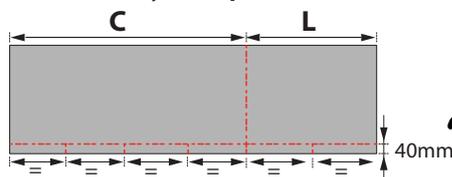

cutting trail

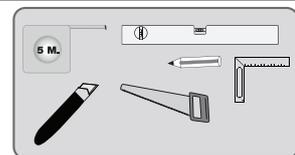

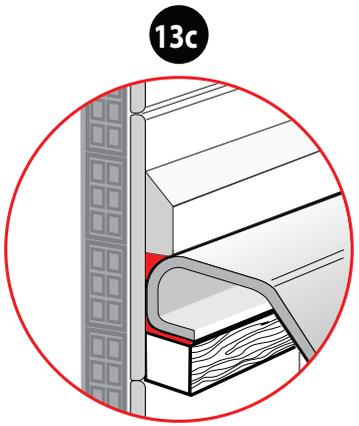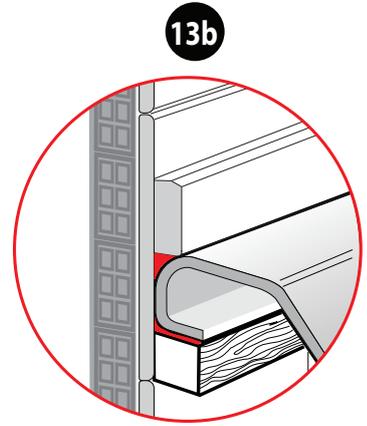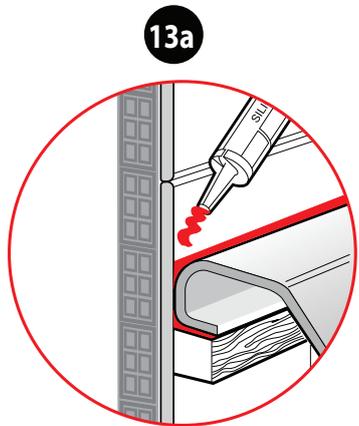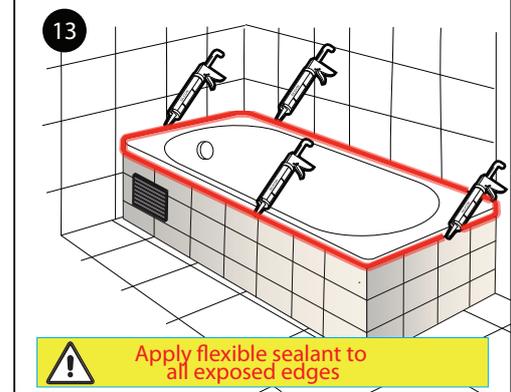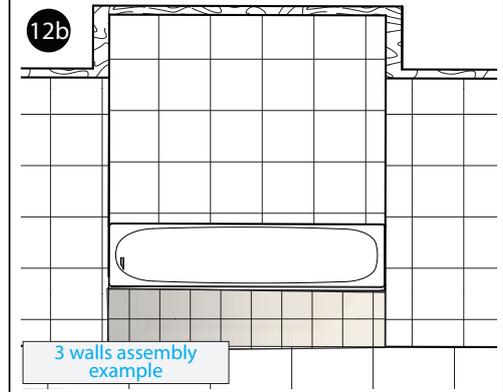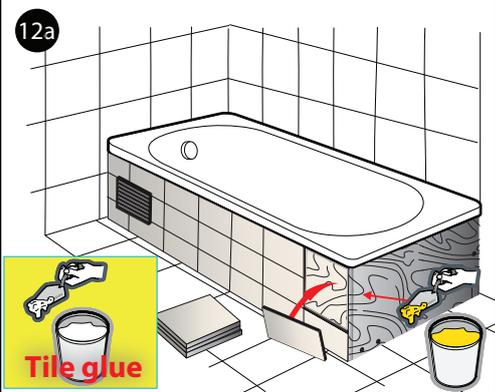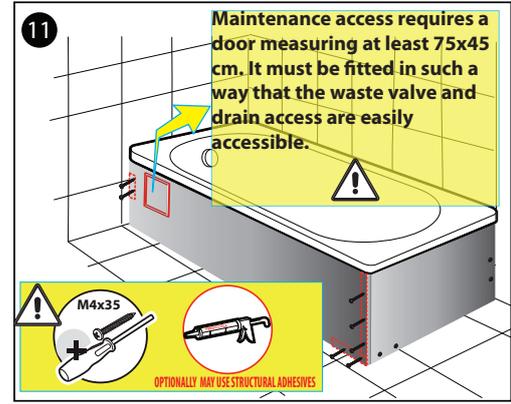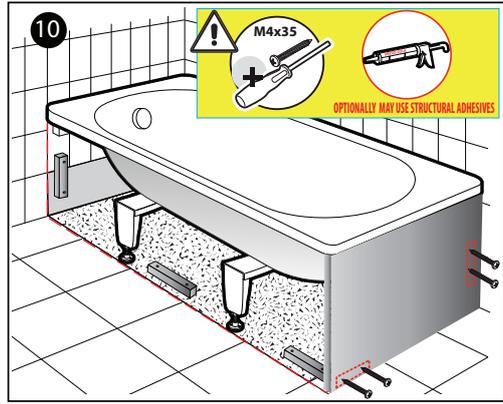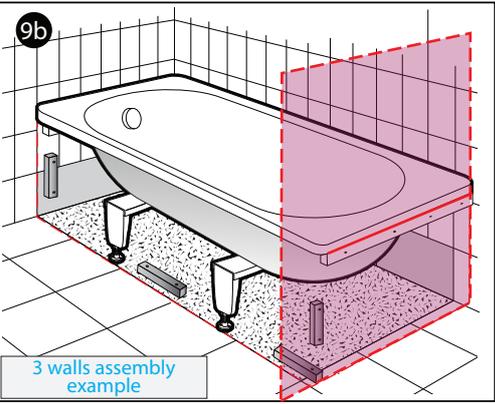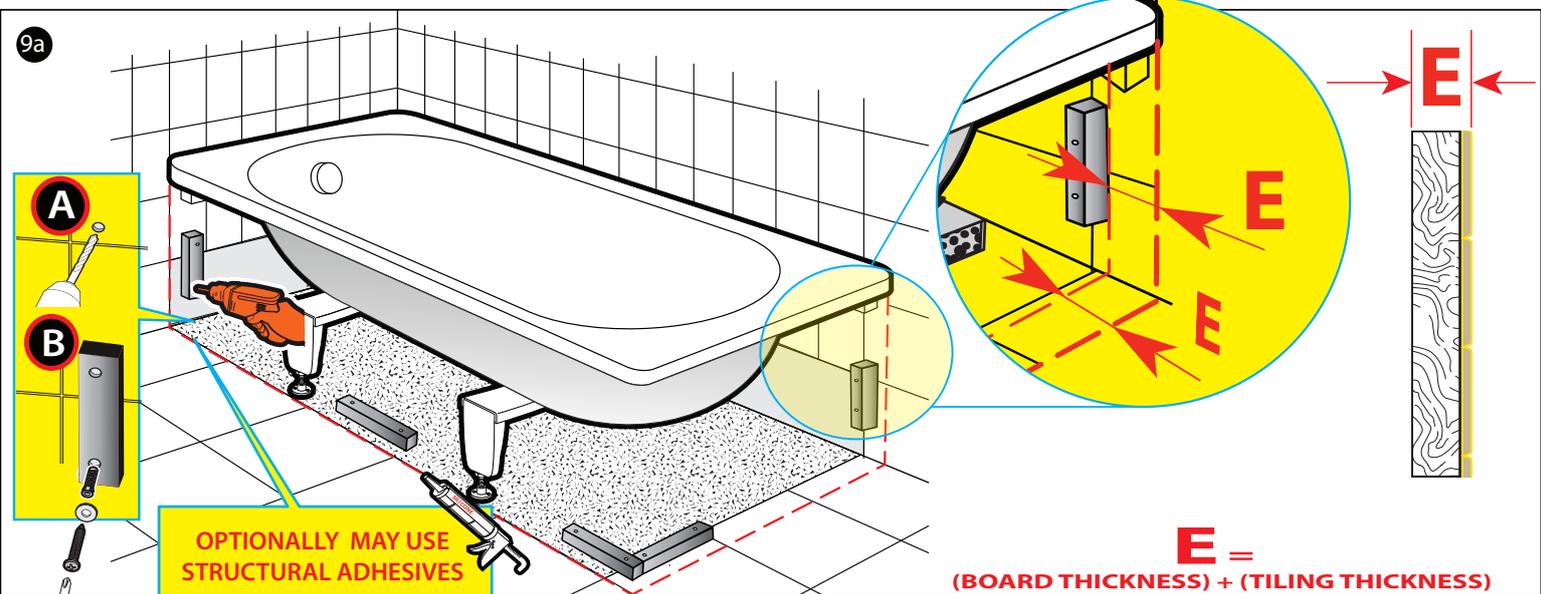

Adjacent to the wall

**Optional:
Bathtub flange (wood, plastic, stone or tile baseboard ...)**